 
Bring your own Appliance and used Provisioning

Linksys, Cisco SPA Series Phone.

 
At the phone press the button for 'setting' as show in the picture



Press the button "9" and the screen will show the IP address



Open Internet explorer or any other internet software and type IP address



At the info tap copy the MAC Address and send it to: <u>info@usvox.com</u>. To create a provitioning file for your Phone Device.

cisco SPA504G Configuration Utility			
Voice	Cal	l History	Perso
Info Ext0	System Ext 4	SIP	Regiona
System Information	Connection Type:	DHCP	
	••	SEP8843E1551D84	
	Current Netmask: Primary DNS:	255.255.255.0 208.67.222.222	
	Secondary DNS:		
Product Information			
	Product Name: Software Version:	SPA504G	
<	MAC Address:		>
	Customization:	Open	

Please give 24 hours to provision the Phone Device. After 24 hours please, fallow the instructions below.

How to provision a Cisco SPA504G

Press the 'Settings" button dial 14 to reset factory defaults.

After all settings are rest, press the **'Settings'** button and dial 9 for the IP address of the CiscoSPA504G Log in into the web portal using the IP address.

Press Admin login and Advance at the right top corner of the page.

cisco SPA504G Configuration Utility	User Login b	a sic advanced

Att

Go to the Provisioning Tap. UFATION UTILITY II History Personal Directory

SIP	Provisioning	Regional
Ext 3	Ext 4	

Chang the following:

1- Under Configuration Profile, Profile Rule. Type:

[key \$B] <u>http://mybilling</u>	.usvox.com/\$A/\$MA.cfg		
(You can copy and paste f	rom this document)		
Configuration Profile			
Provision Enable:	yes 🔻	Resync On Reset:	yes 👻
Resync Random Delay:	2	Resync Periodic:	3600
Resync Error Retry Delay:	3600	Forced Resync Delay:	14400
Resync From SIP:	yes 🔻	Resync After Upgrade Attempt:	yes 👻
Resync Trigger 1:			
Resync Trigger 2:			
Resync Fails On FNF:	yes 🔻		
Profile Rule:	[key \$B]http://mybilling.usvox.com/\$A/\$MA.cfg		
Profile Rule B:			
Profile Rule C:			
Profile Rule D:			

2- Under General Purpose Parameters, GPP A. Type: 12

	СРР E:		
	СРР D:		
	GPP C:		
	СРР В:		
	GPP A: 1	2	
General Purpose Parameters			

Press: Submit All Changes.

The phone will reboot one time.

After the phone reboot press the 'Settings' button. Dial 12 to make a full reboot.

The phone will retard twice and the green buttons with the station number will appear.